
MOT1000A SENSOR INSTALLATION


JYL9801A / JYL9803A

Twist in sensor installation manual

1. Take out cover cap.

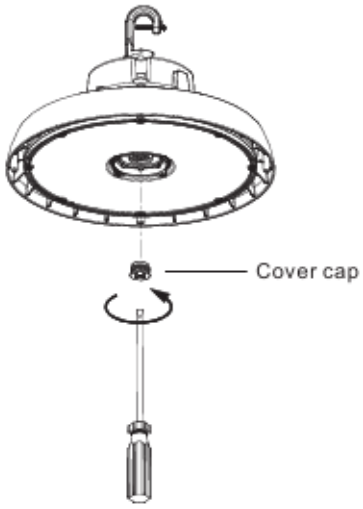


2. Twist in sensor.

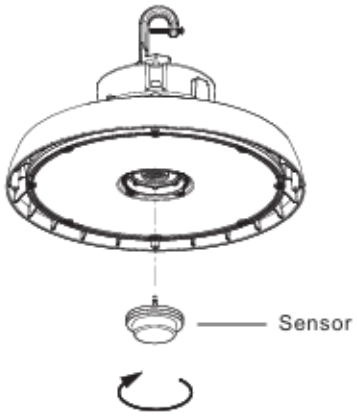

3. Finished installation.



Wiring Diagram

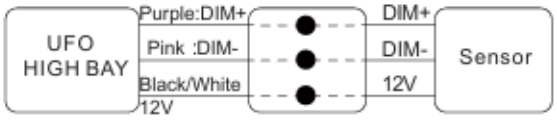

JYL9800A / JYL9802A

Twist in Sensor Installation Manual

