JONATHAN Y

COPPER DROP-IN SINK- SNK-2000

Before You Go Any Further

We indorse referring a specialized if you are unaware with installing bathroom fixtures and plumbing. Jonathan Y accepts no liability for any damage to the floor, walls, plumbing, vanity cabinet, sink, counter top, or individual injury during installation. Observe all local plumbing and building codes.

Getting Started

- Ensure that you have collected all the required resources that are needed for the installation.
- For the following instructions, it is assumed that the vanity is in place, and the countertop has not yet been installed.

Plumbing Tools And Material You May Need :



Silicone Sealant (100% Neutral Cure)



Damp Cloth



Pencil



Drill




Jigsaw


COPPER DROP-IN SINK- SNK-2000

Drop-In Sink Installation


1. For The Cutout Dimensions
Please Follow The Technical Drawing/Dimensions Given.

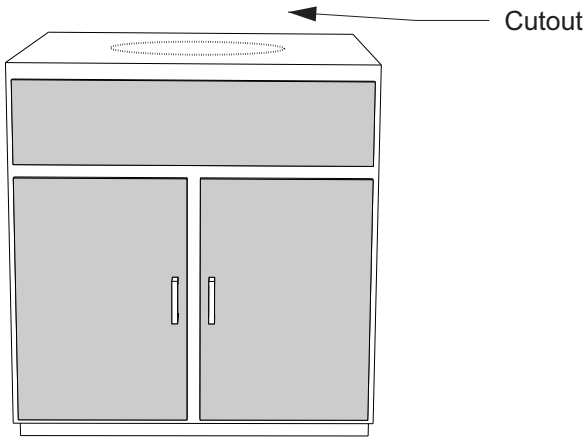


2. Lower the sink into the cutout on the counter to confirm the sink will fit properly.

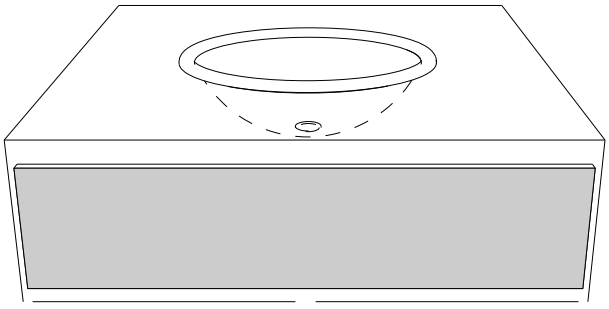

3. Remove the sink and run a bead of neutral cure silicone sealant around the underside of the rim.

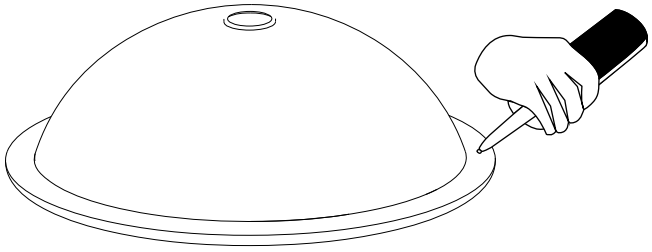


4. Carefully lower the sink back into the cutout and press the sink firmly into place.

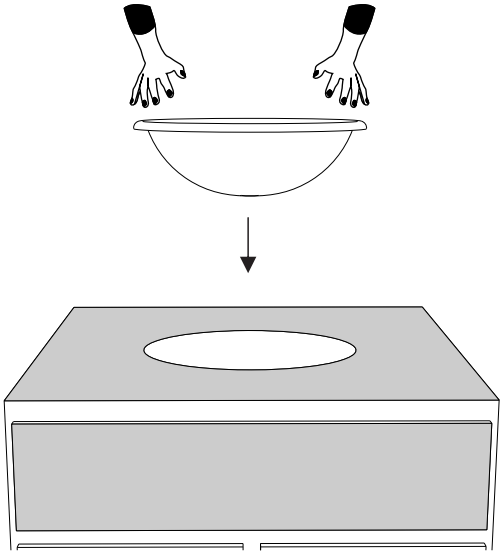


COPPER DROP-IN SINK- SNK-2000

5. Apply a thin bead of silicone sealant around the perimeter of the sink, where the sink meets the counter top. This will prevent moisture from getting underneath the rim of the sink.

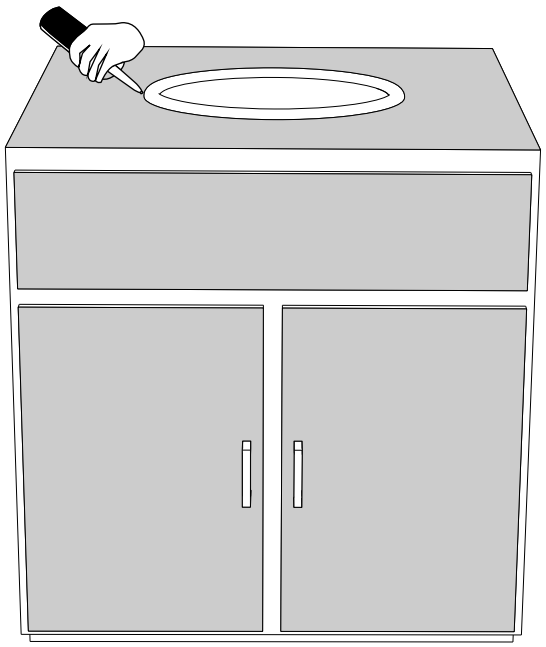

6. Wipe away any excess sealant with a damp cloth.

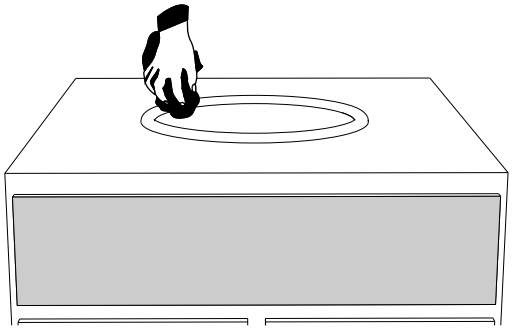

7. Proceed to the installation of your drain and faucet. Allow 24 hours for the silicone sealant to fully dry.



COPPER DROP-IN SINK- SNK-2000

Cleaning and Maintenence

Proper care and regular maintenance are ssential to preserve the natural beauty and durability of handcrafted bath products. These guidelines provide important information to protect the finish, prevent damage, and ensure long-lasting performance while maintaining a premium appearance over time.

It is recommended that you use a cleaner or polish that is designed specifically for copper products. You may use a gentle soap, such as dishwashing liquid and warm water. We recommend the use of a soft sponge or microfiber washcloth. Do not use any abrasive cleaning pads or materials. Rinse with warm water and dry with a clean, soft cloth.

Acidic cleaners, such as lemon juice and vinegar, will strip the antique finish from the copper. Mixtures containing acidic chemicals should be avoided to preserve the finish.

Dimensions

***Fits drain assembly size 1.50 inch**

